


FM510 - V




Quick Start Guide V1.0


FM510-V Dimensions (unit: mm)

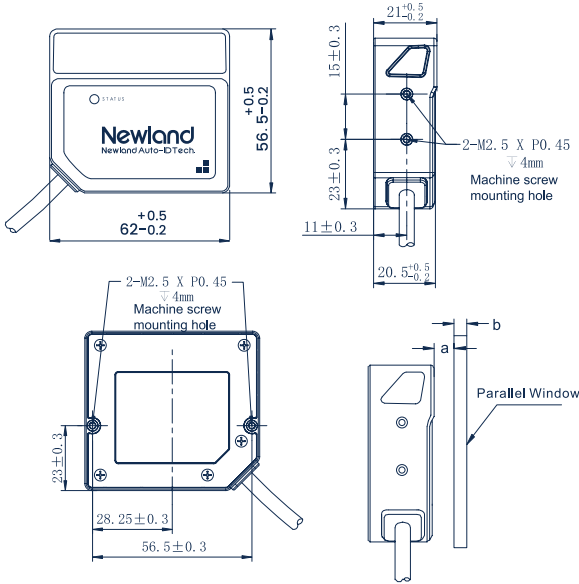

FM510-V Installation

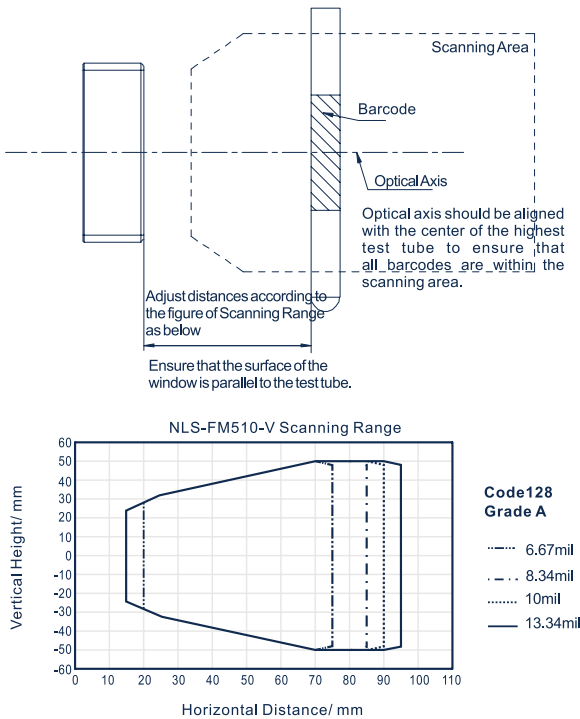


FM510-V Installation

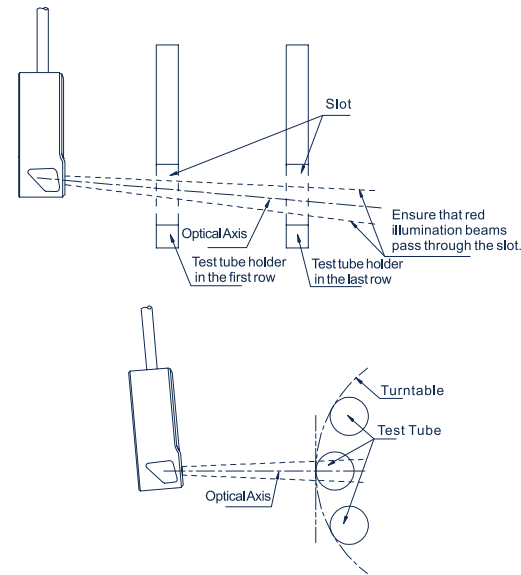

The product has anti-reflective characteristics, ensuring that scanning performance remains unaffected even when the optical axis is perpendicular to the barcode plane.

Interface pinouts

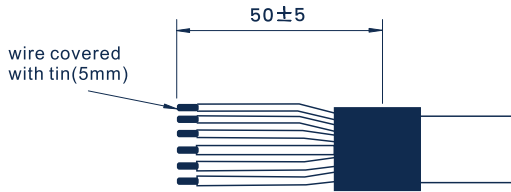


FM510 - H




Quick Start Guide V1.0


FM510-H Dimensions (unit: mm)

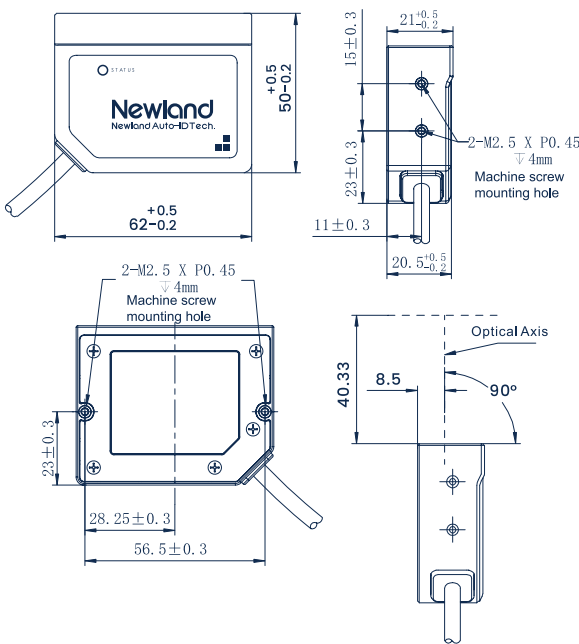

FM510-H Installation

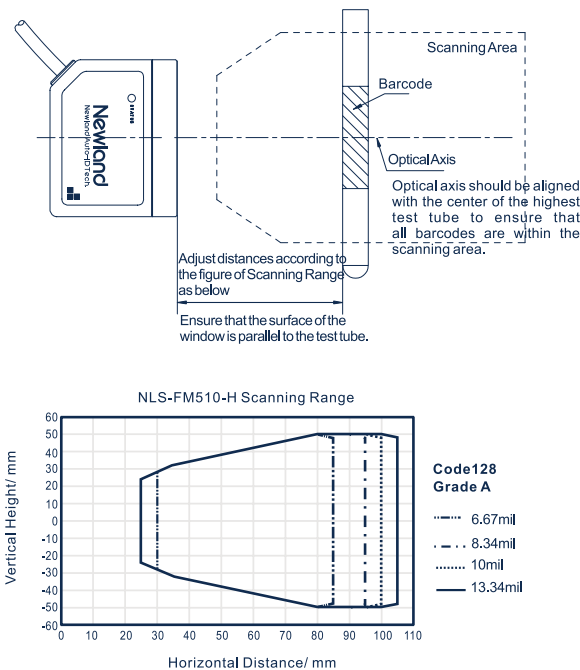


FM510-H Installation

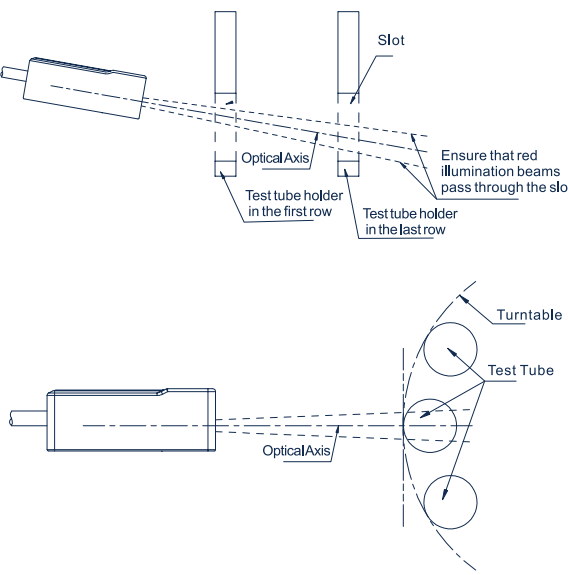

The product has anti-reflective characteristics, ensuring that scanning performance remains unaffected even when the optical axis is perpendicular to the barcode plane.

Status indicator / More information

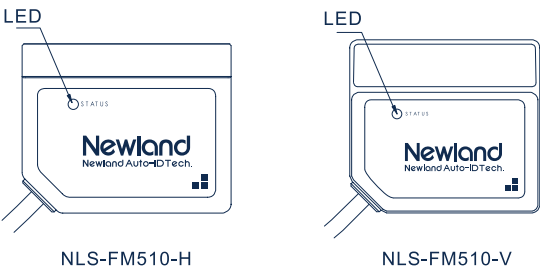

LED status indication:
Blue LED on: the scanner is in standby mode after powering on.
Red LED flashes: Indicates a fault condition.
Please consult Newland service for advice.
Green LED flashes: Indicates a good read/decode.



Visit our website
newland-id.com