



How to Measure

- 1 Hook the tape end over the far edge of package.
- 2 Bring the tape exit point to the near edge of the package.
- 3 Press the 'm' button to take the measurement.

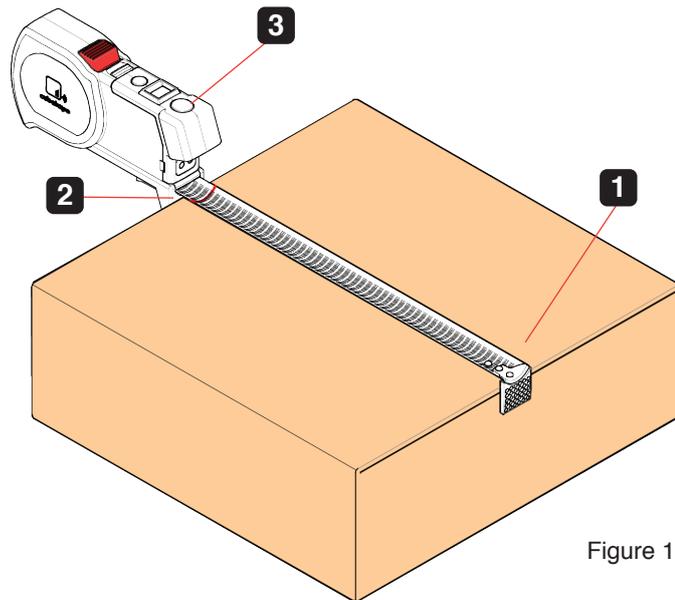


Figure 1

Butt Measure (also known as reverse tare or inside measure)

In normal measuring, the edge of the object being measured is aligned with the zero reference point on Cubetape, and measurement recorded with the Measure button (see figure 1). With some measurements, it is difficult to align the zero reference point with the edge of the object, and in this case the butt measurement feature can be used. This is useful for instance if the object is a pallet, and one edge of the object is the floor.

If butt measure is being used, the edge of the object is aligned with the butt of the Cubetape and measurement recorded with the Measure button, see figure 2.

To place the Cubetape in Butt measure mode scan the shortcut barcode "Butt Measure ON". This turns the feature on for the next measurement only, and the device will reference zero from the butt of the device rather than from the zero reference point.



Butt Measure ON

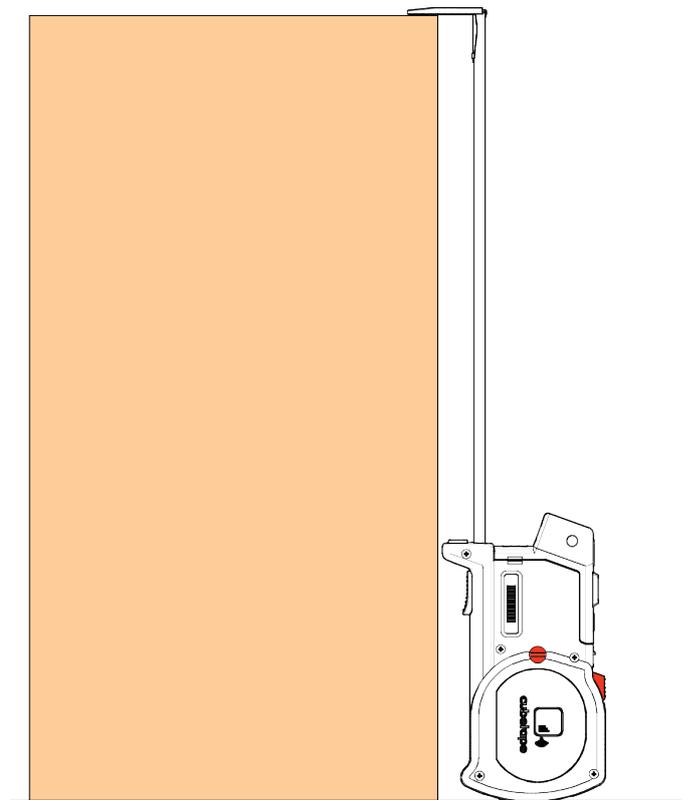


Figure 2