

CONFIGURATION GUIDE



CR950

Configuration barcodes generated based on current firmware versions
WEB GENERATED
3-1-2017



www.codecorp.com



User Manual



[YouTube.com/codecorporation](https://www.youtube.com/codecorporation)

code
ADVANCED BARCODE READERS

Table of Contents

General Reading Mode Settings.....	6
Enable stand detection - Default.....	6 (A2)
Disable stand detection.....	6 (A3)
Continuous Scan Mode On.....	6 (A4)
Motion Detect/Continuous Scan Off (Out of Stand) - Default.....	6 (B1)
Motion Detect Always On.....	6 (B2)
Motion Detection in stand Duplicate Scan Delay 0 ms.....	6 (B3)
Motion Detection in stand Duplicate Scan Delay 500 ms - Default.....	6 (B4)
Enable Cell phone reading enhancement.....	6 (C1)
Disable Cell phone reading enhancement. - Default.....	6 (C2)
Set motion detect maximum brightness to 25%.....	6 (C3)
Set motion detect maximum brightness to 50%.....	6 (C4)
Set motion detect maximum brightness to 75%.....	6 (D1)
Set motion detect maximum brightness to 100% - Default.....	6 (D2)
Data Formatting (Prefix/Suffix) Settings.....	6-7
Disable Data Formatting - Default.....	6 (D4)
Prefix Comma.....	6 (E1)
Prefix Space.....	6 (E2)
Prefix Tab (USB Keyboard Mode Only).....	6 (E3)
Prefix Tab (RS232 Mode Only).....	6 (E4)
Erase Prefix Data.....	7 (A1)
Suffix Comma.....	7 (A2)
Suffix Space.....	7 (A3)
Suffix Enter (USB Keyboard Mode Only) - Default.....	7 (A4)
Suffix Tab (USB Keyboard Mode Only).....	7 (B1)
Suffix Tab (RS232 Mode Only).....	7 (B2)
Suffix Carriage Return (RS232 Mode Only).....	7 (B3)
Suffix Carriage Return Line Feed (RS232 Mode Only) - Default.....	7 (B4)
Suffix Line Feed (RS232 Mode Only).....	7 (C1)
Erase Suffix Data.....	7 (C2)
Convert Barcode Data to Uppercase.....	7 (C3)
Convert Barcode Data to Lowercase.....	7 (C4)
Symbology Settings.....	7-13
Aztec On - Default.....	7 (D2)
Aztec Off.....	7 (D3)
Aztec Inverse & Normal On.....	7 (D4)
Aztec Inverse Off - Default.....	7 (E1)
BC412 On.....	7 (E2)
BC412 Off - Default.....	7 (E3)
Codabar On - Default.....	7 (E4)
Codabar Off.....	8 (A1)
Codabar Checksum On.....	8 (A2)
Codabar Checksum Off - Default.....	8 (A3)
Remove Codabar Start and Stop Delimiters.....	8 (A4)
Code 11 Checksum Stripped from Result On - Default.....	8 (B1)
Code 11 Checksum Stripped from Result Off - Default.....	8 (B2)
Code 11 On.....	8 (B3)
Code 11 Off - Default.....	8 (B4)
Code 11 One Digit Checksum.....	8 (C1)
Code 11 Two Digit Checksum - Default.....	8 (C2)
Code 128 On - Default.....	8 (C3)
Code 128 Off.....	8 (C4)
Code 32 (Italian Pharmacode) On.....	8 (D1)
Code 32 (Italian Pharmacode) Off - Default.....	8 (D2)
Code 39 On - Default.....	8 (D3)
Code 39 Off.....	8 (D4)
Code 39 Checksum On.....	8 (E1)
Code 39 Checksum Off - Default.....	8 (E2)
Code 39 Checksum Stripped from Result On - Default.....	8 (E3)

Table of Contents

Code 39 Checksum Stripped from Result Off - Default.....	8 (E4)
Composite On.....	9 (A1)
Composite Off - Default.....	9 (A2)
Data Matrix On - Default.....	9 (A3)
Data Matrix Off.....	9 (A4)
Data Matrix Mirror On.....	9 (B1)
Data Matrix Mirror Off - Default.....	9 (B2)
Data Matrix Inverse and Normal On - Default.....	9 (B3)
Data Matrix Inverse Off.....	9 (B4)
Data Matrix Rectangular On - Default.....	9 (C1)
Data Matrix Rectangular Off.....	9 (C2)
Data Matrix Rectangular Extended On.....	9 (C3)
Data Matrix Rectangular Extended Off - Default.....	9 (C4)
Hong Kong 2 of 5 On.....	9 (D1)
Hong Kong 2 of 5 Off - Default.....	9 (D2)
Interleaved 2 of 5 On - Default.....	9 (D3)
Interleaved 2 of 5 Off.....	9 (D4)
Interleaved 2 of 5 Checksum On.....	9 (E1)
Interleaved 2 of 5 Checksum Off - Default.....	9 (E2)
Interleaved 2 of 5 Checksum Stripped from Result On.....	9 (E3)
Interleaved 2 of 5 Checksum Stripped from Result Off - Default.....	9 (E4)
Matrix 2 of 5 On.....	10 (A1)
Matrix 2 of 5 Off - Default.....	10 (A2)
Micro PDF417 On.....	10 (A3)
Micro PDF417 Off - Default.....	10 (A4)
Micro QR Code On.....	10 (B1)
Micro QR Code Off - Default.....	10 (B2)
Mode 1 QR Code On.....	10 (B3)
Mode 1 QR Code Off - Default.....	10 (B4)
MSI Plessey Checksum On.....	10 (C1)
MSI Plessey Checksum Off - Default.....	10 (C2)
MSI Plessey Checksum Stripped from Result On.....	10 (C3)
MSI Plessey Checksum Stripped from Result Off - Default.....	10 (C4)
MSI Plessey Checksum Must Be Mod 10/11.....	10 (D1)
MSI Plessey Checksum Must Be Mod 10/10.....	10 (D2)
MSI Plessey On.....	10 (D3)
MSI Plessey Off - Default.....	10 (D4)
NEC 2 of 5 Checksum On - Default.....	10 (E1)
NEC 2 of 5 Checksum Off.....	10 (E2)
NEC 2 of 5 On.....	10 (E3)
NEC 2 of 5 Off - Default.....	10 (E4)
PDF417 On - Default.....	11 (A1)
PDF417 Off.....	11 (A2)
QR Code On - Default.....	11 (A3)
QR Code Off.....	11 (A4)
QR Code Standard Only - Default.....	11 (B1)
QR Code Mirror On.....	11 (B2)
QR Code Mirror Off - Default.....	11 (B3)
QR Code Inverse and Normal On.....	11 (B4)
QR Code Inverse Only.....	11 (C1)
Telepen On.....	11 (C2)
Telepen Off - Default.....	11 (C3)
Output Telepen as Numeric - Default.....	11 (C4)
Output Telepen as ASCII.....	11 (D1)
Trioptic On.....	11 (D2)
Trioptic Off - Default.....	11 (D3)
Reverse Trioptic On.....	11 (D4)
Reverse Trioptic Off - Default.....	11 (E1)
Keep Trioptic Start and Stop Delimiters.....	11 (E2)
Remove Trioptic Start and Stop Delimiters - Default.....	11 (E3)
Straight 2 of 5 On.....	11 (E4)

Table of Contents

Straight 2 of 5 Off - Default.....	12 (A1)
UPC/EAN On - Default.....	12 (A2)
UPC/EAN Off.....	12 (A3)
UPC Supplemental On.....	12 (A4)
UPC Supplemental Off - Default.....	12 (B1)
UPC E Expansion On.....	12 (B2)
UPC E Expansion Off - Default.....	12 (B3)
Convert UPC-A to EAN-13.....	12 (B4)
Do Not Convert UPC-A to EAN-13 - Default.....	12 (C1)
Transmit UPC-A Check Digit.....	12 (C2)
Do Not Transmit UPC-A Check Digit - Default.....	12 (C3)
Transmit UPC-A Number System.....	12 (C4)
Do Not Transmit UPC-A Number System - Default.....	12 (D1)
Do Not Transmit UPC-E Check Digit - Default.....	12 (D2)
Transmit UPC-E Number System.....	12 (D3)
Do Not Transmit UPC-E Number System - Default.....	12 (D4)
Convert EAN-8 to EAN-13.....	12 (E1)
Do Not Convert EAN-8 to EAN-13 - Default.....	12 (E2)
Transmit UPC-E Check Digit.....	12 (E3)
Convert Bookland EAN-13 to ISBN.....	12 (E4)
Do Not Convert Bookland EAN-13 to ISBN - Default.....	13 (A1)
Convert Bookland EAN-13 to ISSN.....	13 (A2)
Do Not Convert Bookland EAN-13 to ISSN - Default.....	13 (A3)
Transmit EAN-8 Check Digit.....	13 (A4)
Do Not Transmit EAN-8 Check Digit - Default.....	13 (B1)
Transmit EAN-13 Check Digit.....	13 (B2)
Do Not Transmit EAN-13 Check Digit - Default.....	13 (B3)
Keyboard Language Settings.....	13-14
List Installed Languages.....	13 (C2)
Get Active Language.....	13 (C3)
Keyboard Support: US English Keyboard Mapping for Windows - Default.....	13 (C4)
Keyboard Support: English Keyboard Mapping for Apple.....	13 (D1)
Keyboard Support: French-Belgian Keyboard Mapping for Windows.....	13 (D2)
Keyboard Support: French Keyboard Mapping for Windows.....	13 (D3)
Keyboard Support: French Keyboard Mapping for Apple.....	13 (D4)
Keyboard Support: German Keyboard Mapping for Apple.....	13 (E1)
Keyboard Support: German Keyboard Mapping for Windows.....	13 (E2)
Keyboard Support: German-Swiss Keyboard Mapping for Apple.....	13 (E3)
Keyboard Support: German-Swiss Keyboard Mapping for Windows.....	13 (E4)
Keyboard Support: Italian Keyboard Mapping for Apple.....	14 (A1)
Keyboard Support: Japanese Keyboard Mapping for Windows.....	14 (A2)
Keyboard Support: Russian Keyboard Mapping for Windows.....	14 (A3)
Keyboard Support: Spanish-Latin American Keyboard Mapping for Windows.....	14 (A4)
Keyboard Support: Spanish Keyboard Mapping for Windows.....	14 (B1)
Keyboard Support: Spanish Keyboard Mapping for Apple.....	14 (B2)
Keyboard Support: UK English Keyboard Mapping for Windows.....	14 (B3)
Keyboard Support: US International (Universal) Keyboard Mapping for Windows.....	14 (B4)
Data Encoding: Raw ASCII to Keyboard XML File Lookup - Default.....	14 (C1)
Data Encoding: UTF8 to Unicode Codepoint - Alt Sequences for Windows.....	14 (C2)
USB Settings.....	14
USB Downloader Mode.....	14 (C4)
USB Keyboard Mode - Default.....	14 (D1)
Enable HID POS Mode.....	14 (D2)
Enable CDC VCOM Mode.....	14 (D3)
Enable USB VCOM mode.....	14 (D4)
RS232 Settings.....	14-15
Reset to RS232 Factory Defaults.....	14 (E2)
RS232 Interface - 1200 Baud Rate.....	14 (E3)

Table of Contents

RS232 Interface - 2400 Baud Rate.....	14 (E4)
RS232 Interface - 4800 Baud Rate.....	15 (A1)
RS232 Interface - 9600 Baud Rate.....	15 (A2)
RS232 Interface - 19200 Baud Rate.....	15 (A3)
RS232 Interface - 38400 Baud Rate.....	15 (A4)
RS232 Interface - 57600 Baud Rate.....	15 (B1)
RS232 Interface - 115200 Baud Rate - Default.....	15 (B2)
RS232 Interface - 7 Data Bits.....	15 (B3)
RS232 Interface - 8 Data Bits - Default.....	15 (B4)
RS232 Interface - 1 Stop Bit - Default.....	15 (C1)
RS232 Interface - 2 Stop Bits.....	15 (C2)
RS232 Interface - Even Parity.....	15 (C3)
RS232 Interface - No Parity.....	15 (C4)
RS232 Interface - Odd Parity.....	15 (D1)
RS232 Interface Flow Control On.....	15 (D2)
RS232 Interface Flow Control Off - Default.....	15 (D3)
Enable Packet Mode.....	15 (D4)
Enable Raw Mode - Default.....	15 (E1)
Enable RS-232 Serial mode - Default.....	15 (E2)
Scan Delay Settings.....	15-16
Disable Duplicate Scan Delay - Default.....	15 (E4)
Set Duplicate Scan delay to 1 Second.....	16 (A1)
Set Duplicate Scan delay to 2 Seconds.....	16 (A2)
Set Duplicate Scan delay to 3 Seconds.....	16 (A3)
Set Duplicate Scan delay to 5 Seconds.....	16 (A4)
Set Duplicate Scan delay to 10 Seconds.....	16 (B1)
Set Duplicate Scan delay to 30 Seconds.....	16 (B2)
Set Duplicate Scan delay to 1 hour.....	16 (B3)
Set Duplicate Scan delay to 1 day.....	16 (B4)
Reader/Modem Command Settings.....	16
Output Reader Configuration.....	16 (C2)
Get Reader Parameters.....	16 (C3)
Reset, Clear and Save Reader Settings.....	16
Reset to Factory Defaults.....	16 (D2)

General Reading Mode Settings	Enable stand detection - Default  M20248_01 A2	Disable stand detection  M20249_01 A3	Continuous Scan Mode On  M20224_01 A4	
	Motion Detect/Continuous Scan Off (Out of Stand) - Default  M20200_01 B1	Motion Detect Always On  M20199_01 B2	Motion Detection in stand Duplicate Scan Delay 0 ms  M20227_01 B3	Motion Detection in stand Duplicate Scan Delay 500 ms - Default  M20228_01 B4
	Enable Cell phone reading enhancement  M20240_01 C1	Disable Cell phone reading enhancement. - Default  M20241_01 C2	Set motion detect maximum brightness to 25%  M20247_01 C3	Set motion detect maximum brightness to 50%  M20246_01 C4
	Set motion detect maximum brightness to 75%  M20245_01 D1	Set motion detect maximum brightness to 100% - Default  M20244_01 D2	Data Formatting (Prefix/Suffix) Settings	
Disable Data Formatting - Default  M20223_01 D4	Prefix Comma  M20209_01 E1	Prefix Space  M20210_01 E2	Prefix Tab (USB Keyboard Mode Only)  M20218_01 E3	Prefix Tab (RS232 Mode Only)  M20211_01 E4

CR950 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Erase Prefix Data</p>  <p>M20207_01</p> <p style="text-align: right;">A1</p>	<p>Suffix Comma</p>  <p>M20215_01</p> <p style="text-align: right;">A2</p>	<p>Suffix Space</p>  <p>M20216_01</p> <p style="text-align: right;">A3</p>	<p>Suffix Enter (USB Keyboard Mode Only) - Default</p>  <p>M20219_02</p> <p style="text-align: right;">A4</p>
<p>Suffix Tab (USB Keyboard Mode Only)</p>  <p>M20220_02</p> <p style="text-align: right;">B1</p>	<p>Suffix Tab (RS232 Mode Only)</p>  <p>M20217</p> <p style="text-align: right;">B2</p>	<p>Suffix Carriage Return (RS232 Mode Only)</p>  <p>M20212_01</p> <p style="text-align: right;">B3</p>	<p>Suffix Carriage Return Line Feed (RS232 Mode Only) - Default</p>  <p>M20213_01</p> <p style="text-align: right;">B4</p>
<p>Suffix Line Feed (RS232 Mode Only)</p>  <p>M20214_01</p> <p style="text-align: right;">C1</p>	<p>Erase Suffix Data</p>  <p>M20208_01</p> <p style="text-align: right;">C2</p>	<p>Convert Barcode Data to Uppercase</p>  <p>M20221_01</p> <p style="text-align: right;">C3</p>	<p>Convert Barcode Data to Lowercase</p>  <p>M20222_01</p> <p style="text-align: right;">C4</p>
<p style="text-align: center;">Symbology Settings</p>	<p>Aztec On - Default</p>  <p>M20002_01</p> <p style="text-align: right;">D2</p>	<p>Aztec Off</p>  <p>M20003_01</p> <p style="text-align: right;">D3</p>	<p>Aztec Inverse & Normal On</p>  <p>M20004_01</p> <p style="text-align: right;">D4</p>
	<p>Aztec Inverse Off - Default</p>  <p>M20005_01</p> <p style="text-align: right;">E1</p>	<p>BC412 On</p>  <p>M20006_01</p> <p style="text-align: right;">E2</p>	<p>BC412 Off - Default</p>  <p>M20007_01</p> <p style="text-align: right;">E3</p>

CR950 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Codabar Off</p>  <p>M20011_01</p> <p>A1</p>	<p>Codabar Checksum On</p>  <p>M20012_01</p> <p>A2</p>	<p>Codabar Checksum Off - Default</p>  <p>M20013_01</p> <p>A3</p>	<p>Remove Codabar Start and Stop Delimiters</p>  <p>M20014_01</p> <p>A4</p>
<p>Code 11 Checksum Stripped from Result On - Default</p>  <p>M20022_01</p> <p>B1</p>	<p>Code 11 Checksum Stripped from Result Off - Default</p>  <p>M20023_01</p> <p>B2</p>	<p>Code 11 On</p>  <p>M20020_01</p> <p>B3</p>	<p>Code 11 Off - Default</p>  <p>M20021_01</p> <p>B4</p>
<p>Code 11 One Digit Checksum</p>  <p>M20032_01</p> <p>C1</p>	<p>Code 11 Two Digit Checksum - Default</p>  <p>M20033_01</p> <p>C2</p>	<p>Code 128 On - Default</p>  <p>M20034_01</p> <p>C3</p>	<p>Code 128 Off</p>  <p>M20035_01</p> <p>C4</p>
<p>Code 32 (Italian Pharmacode) On</p>  <p>M20024_01</p> <p>D1</p>	<p>Code 32 (Italian Pharmacode) Off - Default</p>  <p>M20025_01</p> <p>D2</p>	<p>Code 39 On - Default</p>  <p>M20026_01</p> <p>D3</p>	<p>Code 39 Off</p>  <p>M20027_01</p> <p>D4</p>
<p>Code 39 Checksum On</p>  <p>M20028_01</p> <p>E1</p>	<p>Code 39 Checksum Off - Default</p>  <p>M20029_01</p> <p>E2</p>	<p>Code 39 Checksum Stripped from Result On - Default</p>  <p>M20030_01</p> <p>E3</p>	<p>Code 39 Checksum Stripped from Result Off - Default</p>  <p>M20031_01</p> <p>E4</p>





















CR950 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Composite On</p>  <p>M20036_01</p> <p style="text-align: right;">A1</p>	<p>Composite Off - Default</p>  <p>M20037_01</p> <p style="text-align: right;">A2</p>	<p>Data Matrix On - Default</p>  <p>M20038_01</p> <p style="text-align: right;">A3</p>	<p>Data Matrix Off</p>  <p>M20039_01</p> <p style="text-align: right;">A4</p>
<p>Data Matrix Mirror On</p>  <p>M20042_01</p> <p style="text-align: right;">B1</p>	<p>Data Matrix Mirror Off - Default</p>  <p>M20043_01</p> <p style="text-align: right;">B2</p>	<p>Data Matrix Inverse and Normal On - Default</p>  <p>M20040_01</p> <p style="text-align: right;">B3</p>	<p>Data Matrix Inverse Off</p>  <p>M20041_01</p> <p style="text-align: right;">B4</p>
<p>Data Matrix Rectangular On - Default</p>  <p>M20044_01</p> <p style="text-align: right;">C1</p>	<p>Data Matrix Rectangular Off</p>  <p>M20045_01</p> <p style="text-align: right;">C2</p>	<p>Data Matrix Rectangular Extended On</p>  <p>M20046_01</p> <p style="text-align: right;">C3</p>	<p>Data Matrix Rectangular Extended Off - Default</p>  <p>M20047_01</p> <p style="text-align: right;">C4</p>
<p>Hong Kong 2 of 5 On</p>  <p>M20058_01</p> <p style="text-align: right;">D1</p>	<p>Hong Kong 2 of 5 Off - Default</p>  <p>M20059_01</p> <p style="text-align: right;">D2</p>	<p>Interleaved 2 of 5 On - Default</p>  <p>M20060_01</p> <p style="text-align: right;">D3</p>	<p>Interleaved 2 of 5 Off</p>  <p>M20061_01</p> <p style="text-align: right;">D4</p>
<p>Interleaved 2 of 5 Checksum On</p>  <p>M20062_01</p> <p style="text-align: right;">E1</p>	<p>Interleaved 2 of 5 Checksum Off - Default</p>  <p>M20063_01</p> <p style="text-align: right;">E2</p>	<p>Interleaved 2 of 5 Checksum Stripped from Result On</p>  <p>M20064_01</p> <p style="text-align: right;">E3</p>	<p>Interleaved 2 of 5 Checksum Stripped from Result Off - Default</p>  <p>M20077_01</p> <p style="text-align: right;">E4</p>

CR950 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Matrix 2 of 5 On</p>  <p>M20071_01</p> <p style="text-align: right;">A1</p>	<p>Matrix 2 of 5 Off - Default</p>  <p>M20072_01</p> <p style="text-align: right;">A2</p>	<p>Micro PDF417 On</p>  <p>M20090_01</p> <p style="text-align: right;">A3</p>	<p>Micro PDF417 Off - Default</p>  <p>M20091_01</p> <p style="text-align: right;">A4</p>
<p>Micro QR Code On</p>  <p>M20103_01</p> <p style="text-align: right;">B1</p>	<p>Micro QR Code Off - Default</p>  <p>M20104_01</p> <p style="text-align: right;">B2</p>	<p>Mode 1 QR Code On</p>  <p>M20105_01</p> <p style="text-align: right;">B3</p>	<p>Mode 1 QR Code Off - Default</p>  <p>M20106_01</p> <p style="text-align: right;">B4</p>
<p>MSI Plessey Checksum On</p>  <p>M20079_01</p> <p style="text-align: right;">C1</p>	<p>MSI Plessey Checksum Off - Default</p>  <p>M20078_01</p> <p style="text-align: right;">C2</p>	<p>MSI Plessey Checksum Stripped from Result On</p>  <p>M20082_01</p> <p style="text-align: right;">C3</p>	<p>MSI Plessey Checksum Stripped from Result Off - Default</p>  <p>M20083_01</p> <p style="text-align: right;">C4</p>
<p>MSI Plessey Checksum Must Be Mod 10/11</p>  <p>M20081_01</p> <p style="text-align: right;">D1</p>	<p>MSI Plessey Checksum Must Be Mod 10/10</p>  <p>M20080_01</p> <p style="text-align: right;">D2</p>	<p>MSI Plessey On</p>  <p>M20075_01</p> <p style="text-align: right;">D3</p>	<p>MSI Plessey Off - Default</p>  <p>M20076_01</p> <p style="text-align: right;">D4</p>
<p>NEC 2 of 5 Checksum On - Default</p>  <p>M20086_01</p> <p style="text-align: right;">E1</p>	<p>NEC 2 of 5 Checksum Off</p>  <p>M20087_01</p> <p style="text-align: right;">E2</p>	<p>NEC 2 of 5 On</p>  <p>M20084_01</p> <p style="text-align: right;">E3</p>	<p>NEC 2 of 5 Off - Default</p>  <p>M20085_01</p> <p style="text-align: right;">E4</p>

<p>PDF417 On - Default</p>  <p>M20088_01</p> <p style="text-align: right;">A1</p>	<p>PDF417 Off</p>  <p>M20089_01</p> <p style="text-align: right;">A2</p>	<p>QR Code On - Default</p>  <p>M20096_01</p> <p style="text-align: right;">A3</p>	<p>QR Code Off</p>  <p>M20097_01</p> <p style="text-align: right;">A4</p>
<p>QR Code Standard Only - Default</p>  <p>M20098_01</p> <p style="text-align: right;">B1</p>	<p>QR Code Mirror On</p>  <p>M20101_01</p> <p style="text-align: right;">B2</p>	<p>QR Code Mirror Off - Default</p>  <p>M20102_01</p> <p style="text-align: right;">B3</p>	<p>QR Code Inverse and Normal On</p>  <p>M20100_01</p> <p style="text-align: right;">B4</p>
<p>QR Code Inverse Only</p>  <p>M20099_01</p> <p style="text-align: right;">C1</p>	<p>Telepen On</p>  <p>M20109_01</p> <p style="text-align: right;">C2</p>	<p>Telepen Off - Default</p>  <p>M20110_01</p> <p style="text-align: right;">C3</p>	<p>Output Telepen as Numeric - Default</p>  <p>M20117_01</p> <p style="text-align: right;">C4</p>
<p>Output Telepen as ASCII</p>  <p>M20116_01</p> <p style="text-align: right;">D1</p>	<p>Trioptic On</p>  <p>M20118_01</p> <p style="text-align: right;">D2</p>	<p>Trioptic Off - Default</p>  <p>M20119_01</p> <p style="text-align: right;">D3</p>	<p>Reverse Trioptic On</p>  <p>M20120_01</p> <p style="text-align: right;">D4</p>
<p>Reverse Trioptic Off - Default</p>  <p>M20121_01</p> <p style="text-align: right;">E1</p>	<p>Keep Trioptic Start and Stop Delimiters</p>  <p>M20122_01</p> <p style="text-align: right;">E2</p>	<p>Remove Trioptic Start and Stop Delimiters - Default</p>  <p>M20123_01</p> <p style="text-align: right;">E3</p>	<p>Straight 2 of 5 On</p>  <p>M20107_01</p> <p style="text-align: right;">E4</p>

CR950 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Straight 2 of 5 Off - Default</p>  <p>M20108_01</p> <p style="text-align: right;">A1</p>	<p>UPC/EAN On - Default</p>  <p>M20126_01</p> <p style="text-align: right;">A2</p>	<p>UPC/EAN Off</p>  <p>M20127_01</p> <p style="text-align: right;">A3</p>	<p>UPC Supplemental On</p>  <p>M20128_01</p> <p style="text-align: right;">A4</p>
<p>UPC Supplemental Off - Default</p>  <p>M20129_01</p> <p style="text-align: right;">B1</p>	<p>UPC E Expansion On</p>  <p>M20132_01</p> <p style="text-align: right;">B2</p>	<p>UPC E Expansion Off - Default</p>  <p>M20133_01</p> <p style="text-align: right;">B3</p>	<p>Convert UPC-A to EAN-13</p>  <p>M20134_01</p> <p style="text-align: right;">B4</p>
<p>Do Not Convert UPC-A to EAN-13 - Default</p>  <p>M20135_01</p> <p style="text-align: right;">C1</p>	<p>Transmit UPC-A Check Digit</p>  <p>M20140_01</p> <p style="text-align: right;">C2</p>	<p>Do Not Transmit UPC-A Check Digit - Default</p>  <p>M20141_01</p> <p style="text-align: right;">C3</p>	<p>Transmit UPC-A Number System</p>  <p>M20142_01</p> <p style="text-align: right;">C4</p>
<p>Do Not Transmit UPC-A Number System - Default</p>  <p>M20143_01</p> <p style="text-align: right;">D1</p>	<p>Do Not Transmit UPC-E Check Digit - Default</p>  <p>M20145_01</p> <p style="text-align: right;">D2</p>	<p>Transmit UPC-E Number System</p>  <p>M20146_01</p> <p style="text-align: right;">D3</p>	<p>Do Not Transmit UPC-E Number System - Default</p>  <p>M20147_01</p> <p style="text-align: right;">D4</p>
<p>Convert EAN-8 to EAN-13</p>  <p>M20130_01</p> <p style="text-align: right;">E1</p>	<p>Do Not Convert EAN-8 to EAN-13 - Default</p>  <p>M20131_01</p> <p style="text-align: right;">E2</p>	<p>Transmit UPC-E Check Digit</p>  <p>M20144_01</p> <p style="text-align: right;">E3</p>	<p>Convert Bookland EAN-13 to ISBN</p>  <p>M20136_01</p> <p style="text-align: right;">E4</p>

CR950 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Do Not Convert Bookland EAN-13 to ISBN - Default</p>  <p>M20137_01</p> <p style="text-align: right;">A1</p>	<p>Convert Bookland EAN-13 to ISSN</p>  <p>M20138_01</p> <p style="text-align: right;">A2</p>	<p>Do Not Convert Bookland EAN-13 to ISSN - Default</p>  <p>M20139_01</p> <p style="text-align: right;">A3</p>	<p>Transmit EAN-8 Check Digit</p>  <p>M20148_01</p> <p style="text-align: right;">A4</p>
<p>Do Not Transmit EAN-8 Check Digit - Default</p>  <p>M20149_01</p> <p style="text-align: right;">B1</p>	<p>Transmit EAN-13 Check Digit</p>  <p>M20150_01</p> <p style="text-align: right;">B2</p>	<p>Do Not Transmit EAN-13 Check Digit - Default</p>  <p>M20151_01</p> <p style="text-align: right;">B3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">B4</p>
<p style="text-align: center;">Keyboard Language Settings</p>	<p>List Installed Languages</p>  <p>M20180_01</p> <p style="text-align: right;">C2</p>	<p>Get Active Language</p>  <p>M20179_01</p> <p style="text-align: right;">C3</p>	<p>Keyboard Support: US English Keyboard Mapping for Windows - Default</p>  <p>M20182_01</p> <p style="text-align: right;">C4</p>
	<p>Keyboard Support: English Keyboard Mapping for Apple</p>  <p>M20184_01</p> <p style="text-align: right;">D1</p>	<p>Keyboard Support: French-Belgian Keyboard Mapping for Windows</p>  <p>M20181_01</p> <p style="text-align: right;">D2</p>	<p>Keyboard Support: French Keyboard Mapping for Windows</p>  <p>M20185_01</p> <p style="text-align: right;">D3</p>
<p>Keyboard Support: German Keyboard Mapping for Apple</p>  <p>M20187_01</p> <p style="text-align: right;">E1</p>	<p>Keyboard Support: German Keyboard Mapping for Windows</p>  <p>M20188_01</p> <p style="text-align: right;">E2</p>	<p>Keyboard Support: German-Swiss Keyboard Mapping for Apple</p>  <p>M20189_01</p> <p style="text-align: right;">E3</p>	<p>Keyboard Support: German-Swiss Keyboard Mapping for Windows</p>  <p>M20190_01</p> <p style="text-align: right;">E4</p>

CR950 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Keyboard Support: Italian Keyboard Mapping for Apple</p>  <p>M20191_01</p> <p style="text-align: right;">A1</p>	<p>Keyboard Support: Japanese Keyboard Mapping for Windows</p>  <p>M20192_01</p> <p style="text-align: right;">A2</p>	<p>Keyboard Support: Russian Keyboard Mapping for Windows</p>  <p>M20194_01</p> <p style="text-align: right;">A3</p>	<p>Keyboard Support: Spanish-Latin American Keyboard Mapping for Windows</p>  <p>M20193_01</p> <p style="text-align: right;">A4</p>
<p>Keyboard Support: Spanish Keyboard Mapping for Windows</p>  <p>M20195_01</p> <p style="text-align: right;">B1</p>	<p>Keyboard Support: Spanish Keyboard Mapping for Apple</p>  <p>M20196_01</p> <p style="text-align: right;">B2</p>	<p>Keyboard Support: UK English Keyboard Mapping for Windows</p>  <p>M20197_01</p> <p style="text-align: right;">B3</p>	<p>Keyboard Support: US International (Universal) Keyboard Mapping for Windows</p>  <p>M20198_01</p> <p style="text-align: right;">B4</p>
<p>Data Encoding: Raw ASCII to Keyboard XML File Lookup - Default</p>  <p>M20203_01</p> <p style="text-align: right;">C1</p>	<p>Data Encoding: UTF8 to Unicode Codepoint - Alt Sequences for Windows</p>  <p>M20204_01</p> <p style="text-align: right;">C2</p>	<p>USB Settings</p>	<p>USB Downloader Mode</p>  <p>M20177_01</p> <p style="text-align: right;">C4</p>
<p>USB Keyboard Mode - Default</p>  <p>M20178_01</p> <p style="text-align: right;">D1</p>	<p>Enable HID POS Mode</p>  <p>M20225_01</p> <p style="text-align: right;">D2</p>	<p>Enable CDC VCOM Mode</p>  <p>M20226_01</p> <p style="text-align: right;">D3</p>	<p>Enable USB VCOM mode</p>  <p>M20250_01</p> <p style="text-align: right;">D4</p>
<p>RS232 Settings</p>	<p>Reset to RS232 Factory Defaults</p>  <p>M20112_01</p> <p style="text-align: right;">E2</p>	<p>RS232 Interface - 1200 Baud Rate</p>  <p>M20160_01</p> <p style="text-align: right;">E3</p>	<p>RS232 Interface - 2400 Baud Rate</p>  <p>M20161_01</p> <p style="text-align: right;">E4</p>












CR950 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>RS232 Interface - 4800 Baud Rate</p>  <p>M20162_01</p> <p style="text-align: right;">A1</p>	<p>RS232 Interface - 9600 Baud Rate</p>  <p>M20163_01</p> <p style="text-align: right;">A2</p>	<p>RS232 Interface - 19200 Baud Rate</p>  <p>M20164_01</p> <p style="text-align: right;">A3</p>	<p>RS232 Interface - 38400 Baud Rate</p>  <p>M20165_01</p> <p style="text-align: right;">A4</p>
<p>RS232 Interface - 57600 Baud Rate</p>  <p>M20166_01</p> <p style="text-align: right;">B1</p>	<p>RS232 Interface - 115200 Baud Rate - Default</p>  <p>M20167_01</p> <p style="text-align: right;">B2</p>	<p>RS232 Interface - 7 Data Bits</p>  <p>M20168_01</p> <p style="text-align: right;">B3</p>	<p>RS232 Interface - 8 Data Bits - Default</p>  <p>M20169_01</p> <p style="text-align: right;">B4</p>
<p>RS232 Interface - 1 Stop Bit - Default</p>  <p>M20170_01</p> <p style="text-align: right;">C1</p>	<p>RS232 Interface - 2 Stop Bits</p>  <p>M20171_01</p> <p style="text-align: right;">C2</p>	<p>RS232 Interface - Even Parity</p>  <p>M20172_01</p> <p style="text-align: right;">C3</p>	<p>RS232 Interface - No Parity</p>  <p>M20173_01</p> <p style="text-align: right;">C4</p>
<p>RS232 Interface - Odd Parity</p>  <p>M20174_01</p> <p style="text-align: right;">D1</p>	<p>RS232 Interface Flow Control On</p>  <p>M20175_01</p> <p style="text-align: right;">D2</p>	<p>RS232 Interface Flow Control Off - Default</p>  <p>M20176_01</p> <p style="text-align: right;">D3</p>	<p>Enable Packet Mode</p>  <p>M20238_01</p> <p style="text-align: right;">D4</p>
<p>Enable Raw Mode - Default</p>  <p>M20239_01</p> <p style="text-align: right;">E1</p>	<p>Enable RS-232 Serial mode - Default</p>  <p>M20251_01</p> <p style="text-align: right;">E2</p>	<p>Scan Delay Settings</p>	
			<p>Disable Duplicate Scan Delay - Default</p>  <p>M20229_01</p> <p style="text-align: right;">E4</p>

CR950 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Set Duplicate Scan delay to 1 Second</p>  <p>M20230_01</p> <p style="text-align: right;">A1</p>	<p>Set Duplicate Scan delay to 2 Seconds</p>  <p>M20231_01</p> <p style="text-align: right;">A2</p>	<p>Set Duplicate Scan delay to 3 Seconds</p>  <p>M20232_01</p> <p style="text-align: right;">A3</p>	<p>Set Duplicate Scan delay to 5 Seconds</p>  <p>M20233_01</p> <p style="text-align: right;">A4</p>
<p>Set Duplicate Scan delay to 10 Seconds</p>  <p>M20234_01</p> <p style="text-align: right;">B1</p>	<p>Set Duplicate Scan delay to 30 Seconds</p>  <p>M20235_01</p> <p style="text-align: right;">B2</p>	<p>Set Duplicate Scan delay to 1 hour</p>  <p>M20236_01</p> <p style="text-align: right;">B3</p>	<p>Set Duplicate Scan delay to 1 day</p>  <p>M20237_01</p> <p style="text-align: right;">B4</p>
<p style="text-align: center;">Reader/Modem Command Settings</p>	<p>Output Reader Configuration</p>  <p>M20113_01</p> <p style="text-align: right;">C2</p>	<p>Get Reader Parameters</p>  <p>M20114_01</p> <p style="text-align: right;">C3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">C4</p>
	<p>Reset to Factory Defaults</p>  <p>M20111_01</p> <p style="text-align: right;">D2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">D3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">D4</p>
<p>Intentionally Blank</p> <p style="text-align: right;">E1</p>	<p>Intentionally Blank</p> <p style="text-align: right;">E2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">E3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">E4</p>