


Installation Guide

Installation Guide for SPV1112-FX

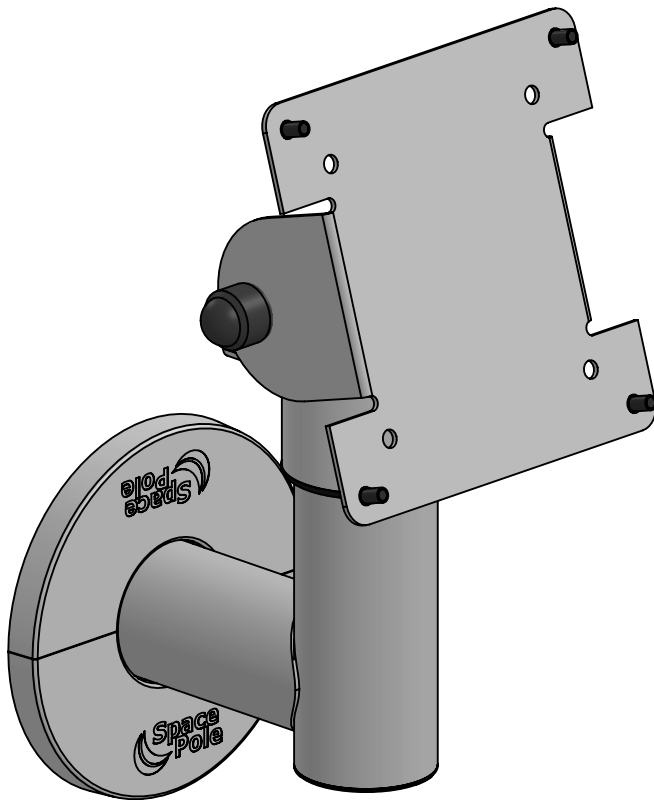




CAUTION

- Please don't power the hardware, until the entire solution is fully assembled.
- If these installation instructions are not followed precisely, it could lead to product failure and potential personal injury.
- Ergonomic Solutions / SpacePole inc cannot be held responsible for any product failure or personal injury, if the installation instructions are not followed correctly.
- Ergonomic Solutions / SpacePole inc cannot be held responsible for any product failure or personal injury, if any modifications have been made to the product by the customer.
-


MAINTENANCE

- It is the responsibility of the customer to periodically check the installation and ensure it is clean, all air ventilation holes are free and all fixings are tightened correctly.


Tool list

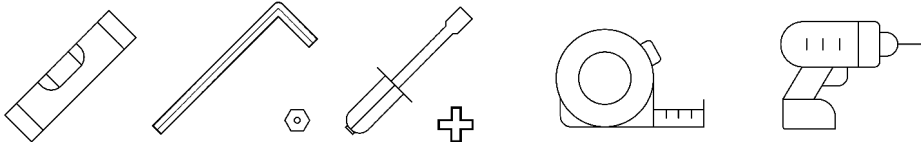


Box content

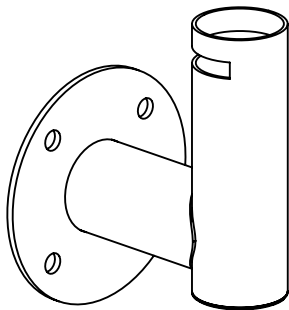

1x (A)


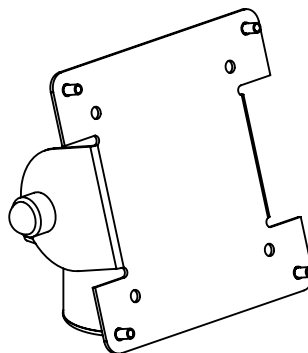


1x (B)

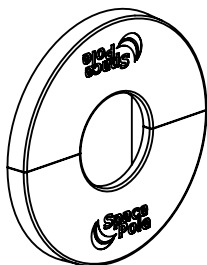

1x (C)



Dimensions [mm]

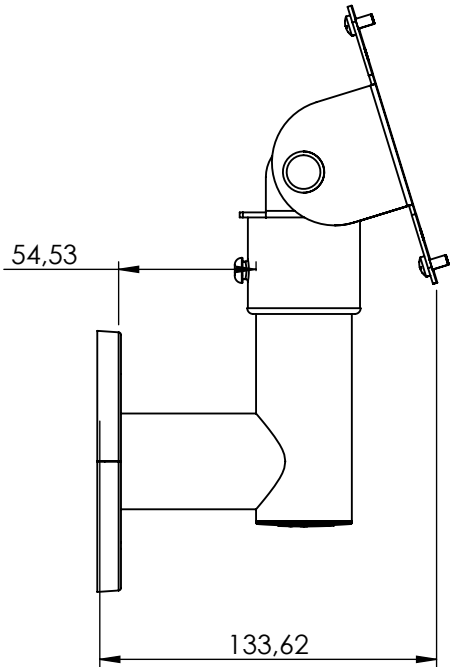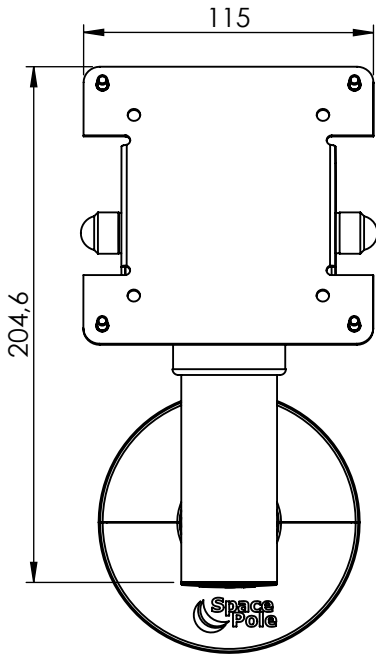

Steps

Step 1:


- 1 Drill four holes in the mounting surface according to the dimensions and positions shown in the drawing for **part A**.
- 2 Use suitable wall plugs and screws according to the wall type. Ensure the hole spacing matches the flange pattern so the part can be securely installed.

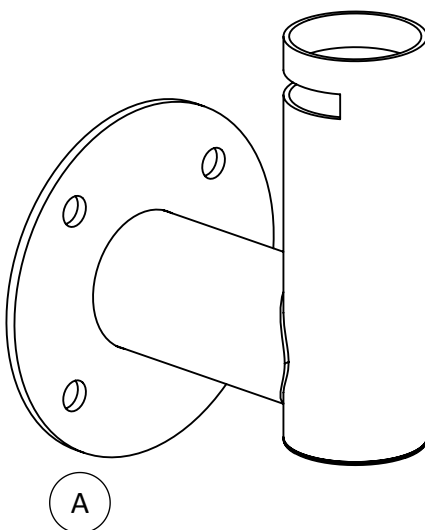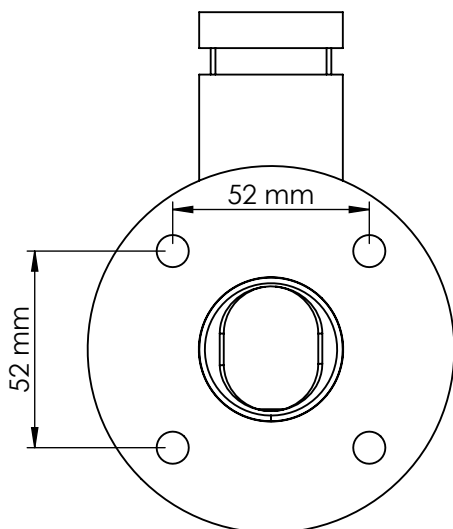

Steps

Step 2:


Install **part B** on to the **part A**. Slide it down and tighten the screws to secure it in place.

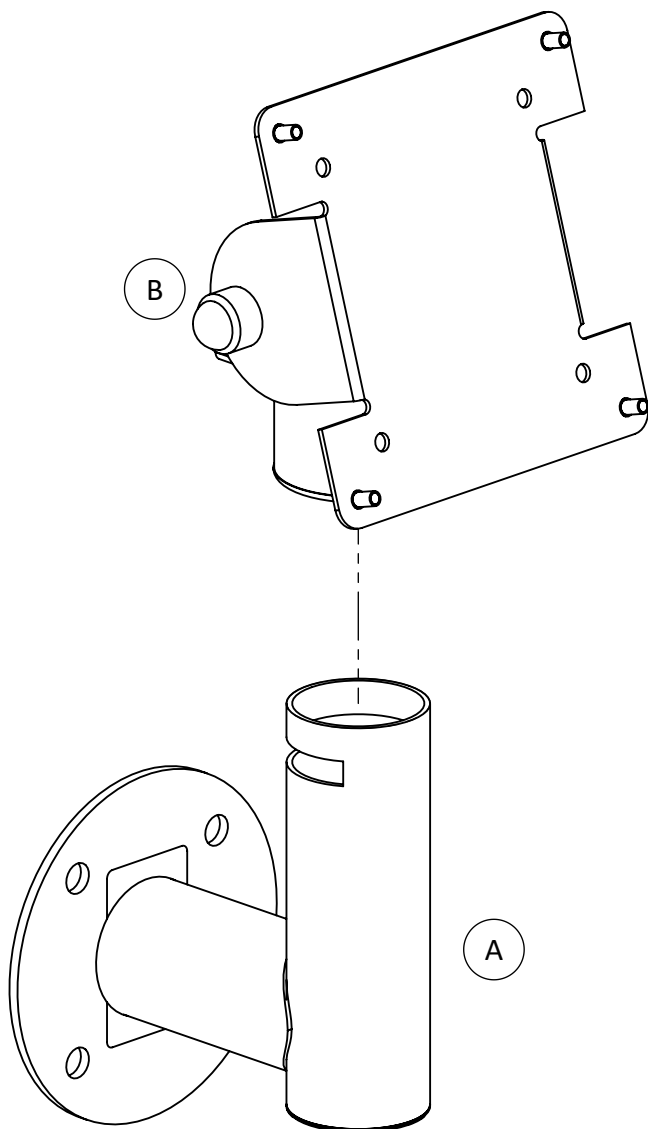

Steps

Step 3:


Attach the screen to the **part B** and tighten the screws securely.

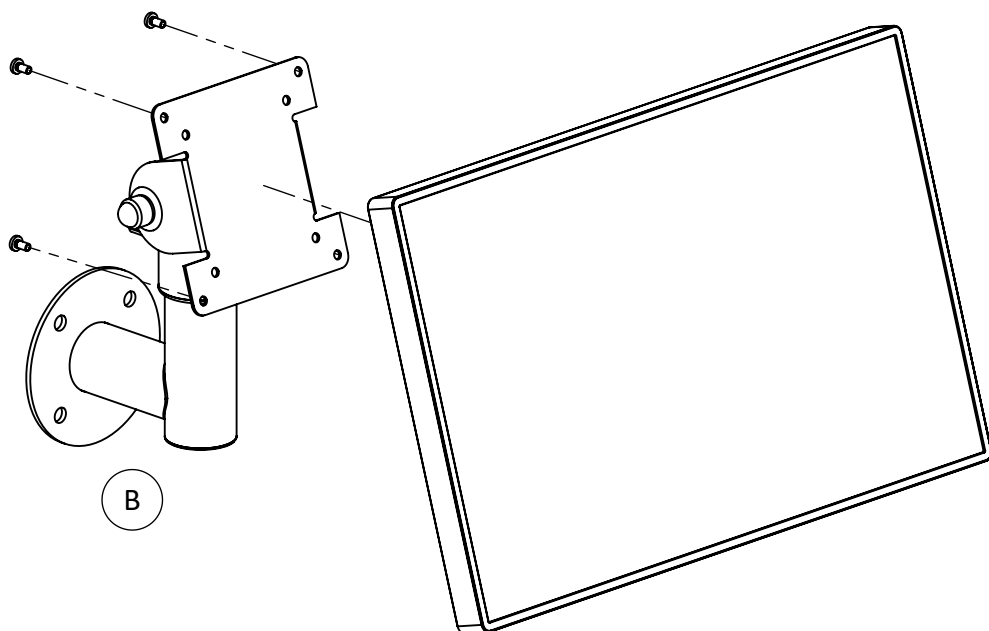


Steps

Step 4:

Mount the two-piece flange cover **part C** on to the **part B**

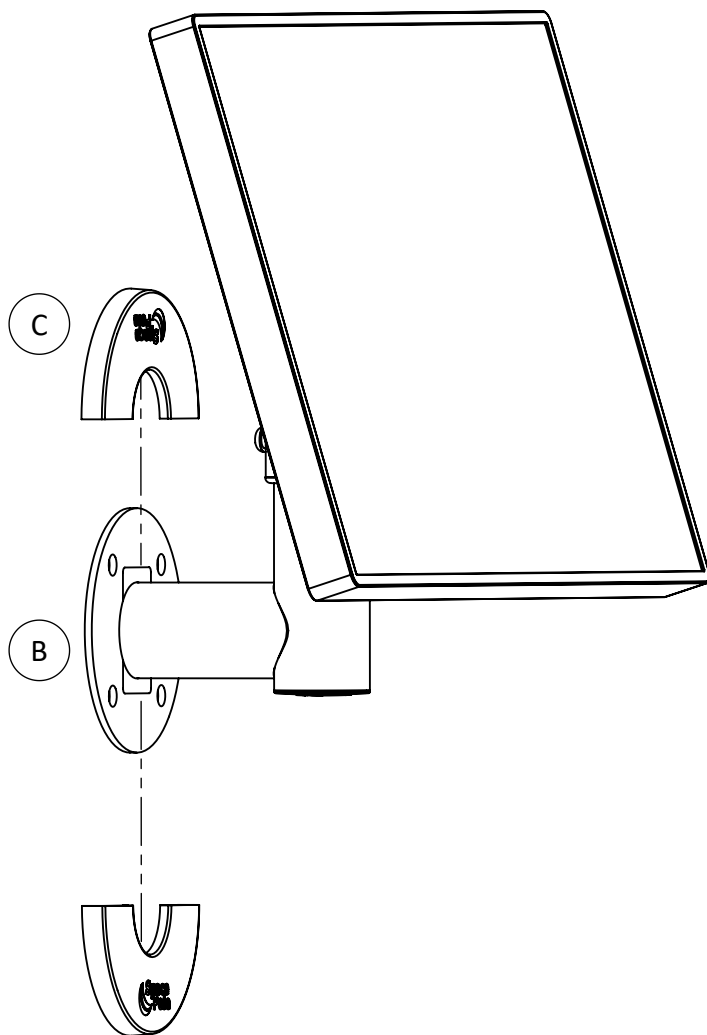

This page intentionally left blank

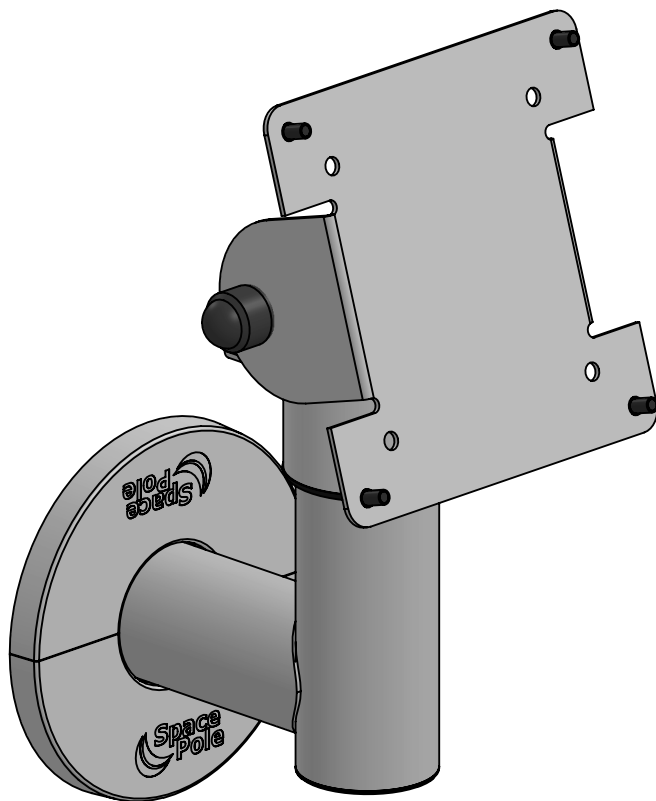

Need help? Contact us



ergonomic.solutions/about/contact-us



spacepole.com/about/contact-us